TRANSCENSION
Show Control

WWW.PROLIGHT.CO.UK

# Fade Master 4

(ORDER CODE CONT11)

# USER MANUAL

# WARNING

**FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY BEFORE YOUR INITIAL START-UP!**

## CAUTION!

**Keep this equipment away from rain, moisture and liquids.**

## SAFETY INSTRUCTIONS

Every person involved with the installation, operation & maintenance of this equipment should:

- Be competent
- Follow the instructions of this manual

**CAUTION! TAKE CARE USING THIS EQUIPMENT!**
**HIGH VOLTAGE-RISK OF ELECTRIC SHOCK!!**

Before your initial start-up, please make sure that there is no damage caused during transportation. Should there be any, consult your dealer and do not use the equipment.

To maintain the equipment in good working condition and to ensure a safe operation, it is necessary for the user to follow the safety instructions and warning notes written in this manual.

Please note that damages caused by user modifications to this equipment are not subject to warranty.

**IMPORTANT:**

**The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorised modification to the equipment.**

- Never let the power-cable come into contact with other cables. Handle the power-cable and all mains voltage connections with particular caution!
- Never remove warning or informative labels from the equipment.
- Do not open the equipment and do not modify the equipment.
- Do not connect this equipment to a dimmer-pack.
- Do not switch the equipment on and off in short intervals, as this will reduce the system's life.
- Only use the equipment indoors.
- Do not expose to flammable sources, liquids or gases.
- Always disconnect the power from the mains when equipment is not in use or before cleaning! Only handle the power-cable by the plug. Never pull out the plug by pulling the power-cable.
- Make sure that the available voltage is between 220v/240v.
- Make sure that the power-cable is never crimped or damaged. Check the equipment and the power-cable periodically.
- If the equipment is dropped or damaged, disconnect the mains power supply immediately. Have a qualified engineer inspect the equipment before operating again.
- If the equipment has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation might damage the equipment. Leave the equipment switched off until it has reached room temperature.
- If your product fails to function correctly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Prolight dealer for service.
- Only use fuses of same type and rating.
- Repairs, servicing and power connection must only be carried out by a qualified technician. THIS UNIT CONTAINS NO USER SERVICEABLE PARTS.
- WARRANTY; One year from date of purchase.

**OPERATING DETERMINATIONS**

If this equipment is operated in any other way, than those described in this manual, the product may suffer damage and the warranty becomes void.

Incorrect operation may lead to danger e.g.: short-circuit, burns, electric shocks, lamp failure etc.

Do not endanger your own safety and the safety of others!
Incorrect installation or use can cause serious damage to people and property!

## Description of the equipment

### Features

- 4 channel dimmer complete with manual flash overide
- 4 channel sequencer
- Built-in microphone for sound activation

### FRONT VIEW

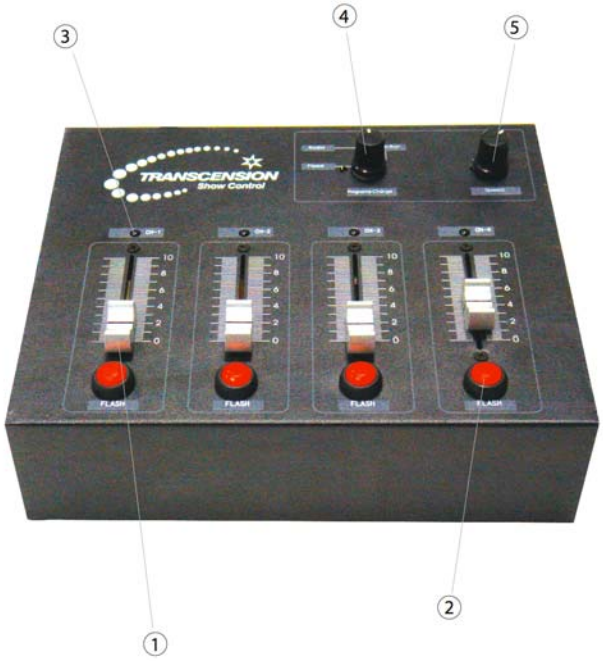


Fig 1

1) Dimmer Faders 1-4
2) Flash buttons 1-4
3) Channel activation indicator 1-4
4) Programme Change Switch
5) Speed/Sensitivity Control

**Back View**

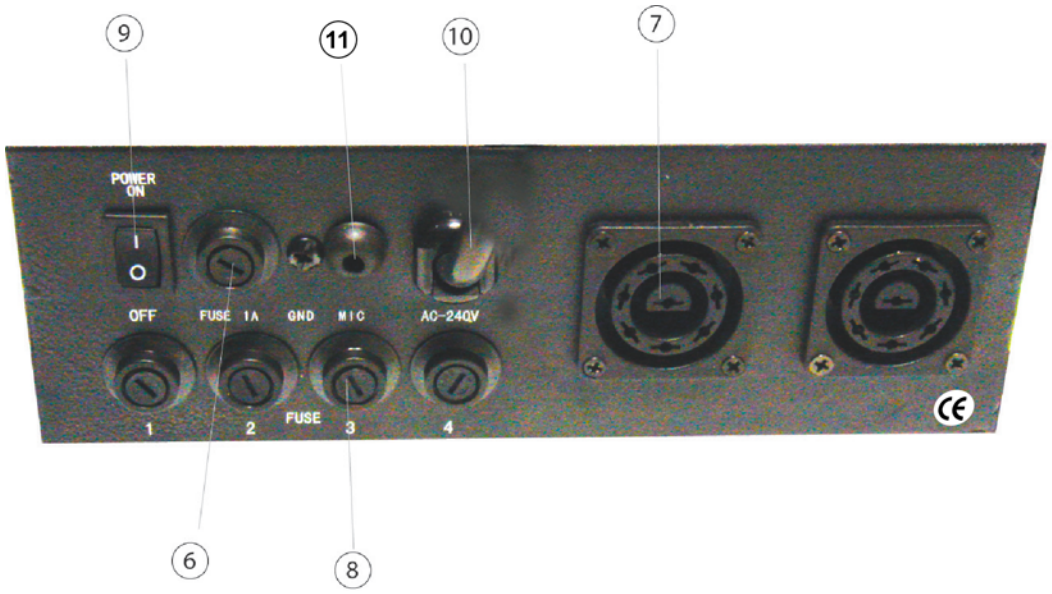


Fig 2

6) Main Fuse F1A 250V
7) 2 x Bulgin Sockets
8) 4 x Fuse F5A 250v 6 x 30mm
9) ON/OFF Switch
10) AC Input
11) Built-in microphone

**Pin Connections:**
1) Earth
2) Channel 1
3) Channel 2
4) Channel 3
5) Channel 4
6) Common Neutral
7) Common Neutral
8) Common Neutral

**Functions**

1) Programme Selector set to "**FLOOD**"
   In this mode the sliders can be set to the desired output for each channel, also the **"FLASH"** buttons will operate to take the channel to full output.

2) Function Selector set to "**AUDIO**"
   In this mode the sliders still set the output level, and the internal chase pattern will be triggered by the built-in microphone, you can adjust the sensitivity with the **"SPEED/SENSITIVITY"** control.

3) Function Selector set to "**AUTORUN**"
   In this mode use the sliders as above to set the output, and the internal chase patterns will operate, you can adjust the speed using the "**SPEED/SENSITIVITY**" control.

## Maintenance

**Always disconnect the electric mains power supply before cleaning or servicing. Damages caused by non-observance are not subject to warranty.**

The Fade Master 4 requires almost no maintenance. However, you should keep the unit clean. Wipe the cover with a damp cloth.
Do not immerse in liquid.
Do not use alcohol or solvents
Make sure the equipment is fully dry before re-connecting to the mains.

## Product Specification

- Model: Prolight Fade Master 4
- Voltage: AC 240V- 50Hz (CE)
- Max Load Per Channel: 1000W
- Max Total Load: 2400W
- Input Fuse: F1A 250V
- Fuse Per output Channel: F5A 250V 6x30mm
- Dimensions: 236 x 190 x 82mm (L x W x H)
- Weight: 2,6 kg